




Installation Instruction Manual Unit Installation Guide

Please read this manual thoroughly before proceeding with the installation of the unit.

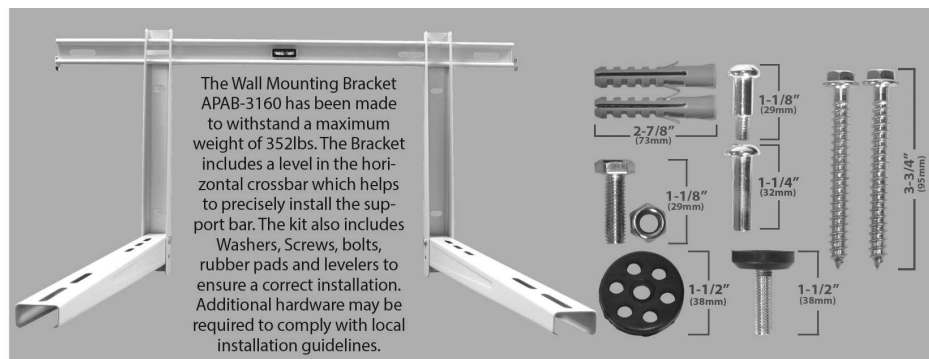


Recommended Installation Tools:

Drill



Drill Bit Set

(Masonry, wood, or other depending on the surface where the Bracket will be installed)

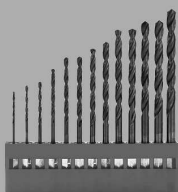

Hex Nut Driver Bits



Measuring Tape



APAB-3160 Installation

3. Installing the Crossbar

- Level the crossbar at the designated installation location and mark at least two drill holes on the wall.
- Carefully drill the marked holes.
- Insert expanders into the holes, ensuring they are suitable for the wall material and weight expectations.
- Secure the bracket to the wall with corresponding screws.




APAB-3160 Installation

Optional Steps to Secure Brackets to the Wall

Note: This step is only necessary if the brackets need additional support.

- Mark the required separation between brackets according to the measurements of the Condensing Unit.
- Remove the brackets from the crossbar and drill holes to secure them to the wall.
- Insert expanders suitable for the wall material.
- Place the brackets back onto the crossbar and secure them to the wall.

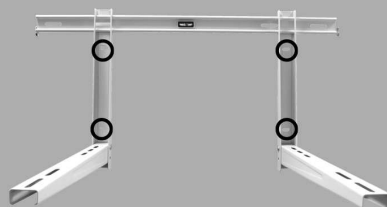

APAB-3160 Installation

1. Identifying the Installation Location

Before installing the unit, ensure that you've identified a suitable location following the manufacturer's space requirements for your AC or Heat Pump unit. Take into account adequate height above the ground to prevent contact with external elements like water, snow, mud, and debris.



2. Checking Wall Strength

Verify that the chosen wall can adequately support the weight of the unit. Ensure it is structurally sound.

APAB-3160 Installation

4. Preparing the Brackets


- Prepare the brackets by inserting the security pins at a 90-degree angle to keep them from folding closed.
- Screw in the back levelers on the brackets.

5. Measuring for Bracket Placement

Measure the distance between the base foot of the Condensing Unit.

6. Attaching the Brackets

Slide the brackets into the crossbar, ensuring they are securely in place.

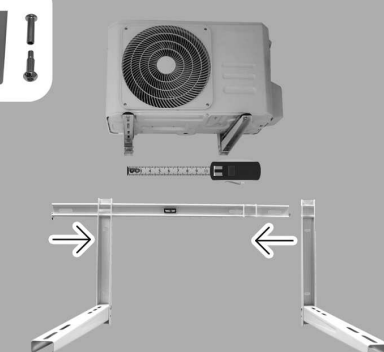

APAB-3160 Installation

7. Placing the Condensing Unit


Place the Condensing Unit onto the brackets, ensuring it is stable and level.

8. Adding Rubber Pads

Insert rubber pads below the feet of the Condensing Unit.

9. Securing the Unit to the Brackets

Use the provided nuts and bolts to fasten the unit securely to the brackets.

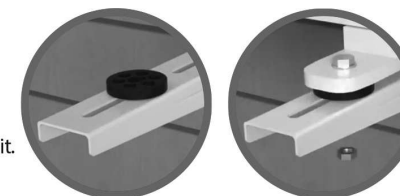

Congratulations! You have successfully installed your unit. For further operational instructions, please contact us at www.appliparts.com